

# Acrylic Floor Primer

## Product Usage Guide

Professional

### BD125-5




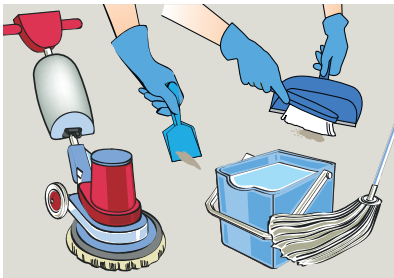
#### Health & Safety


Please refer to relevant COSHH Safety Data Sheet

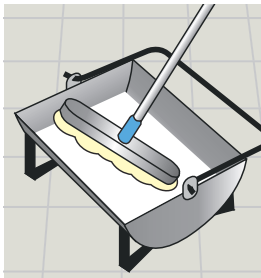


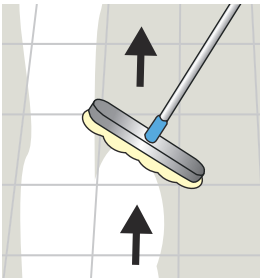
Scan for further product details

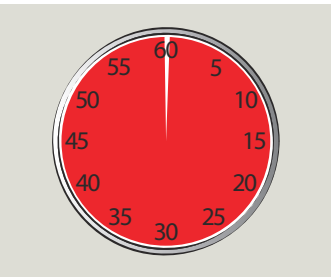
- 

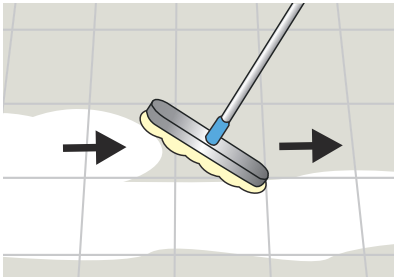
**1** Use appropriate PPE as indicated in the Safety Data Sheet and place Safety Signs.
- 

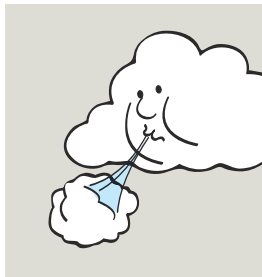
**2** Prepare the floor, remove all traces of old polish/sealer. Ensure floor is clean dry and neutral.  
Refer to the Jangro Floor Care Chart or the Product Usage Guide for floor polish remover guidance on floor preparation.
- 


**3** Pour polish into bucket or tray. (undiluted).
- 


**4** Place flat mop or applicator into polish. Remove surplus.
- 

**5** Apply polish to dry floor, thinly and evenly in straight lines.
- 

**6** Leave to dry thoroughly. Approximately 1 hour.
- 

**7** Ensure floor is free from debris/dust before applying a second coat. Apply in opposite direction to the first. Leave a 2.5-5cm gap from the edge.
- 

**8** Leave to dry. Light traffic 4-8 hours, heavy traffic 24-48 hours.
- 

**9** Remove Safety Signs.
- 

**10** Next Step, use your preferred Jangro floor seal/or polish for the best finish.